


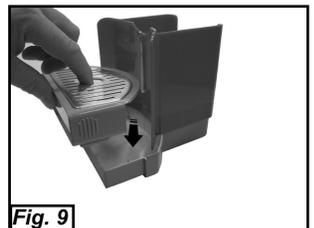


KUBOX

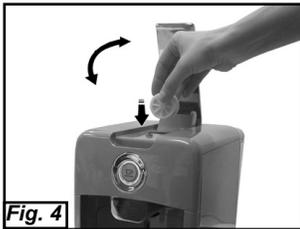

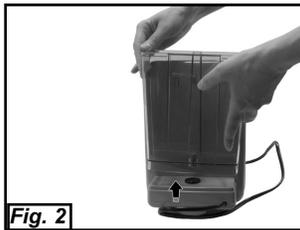

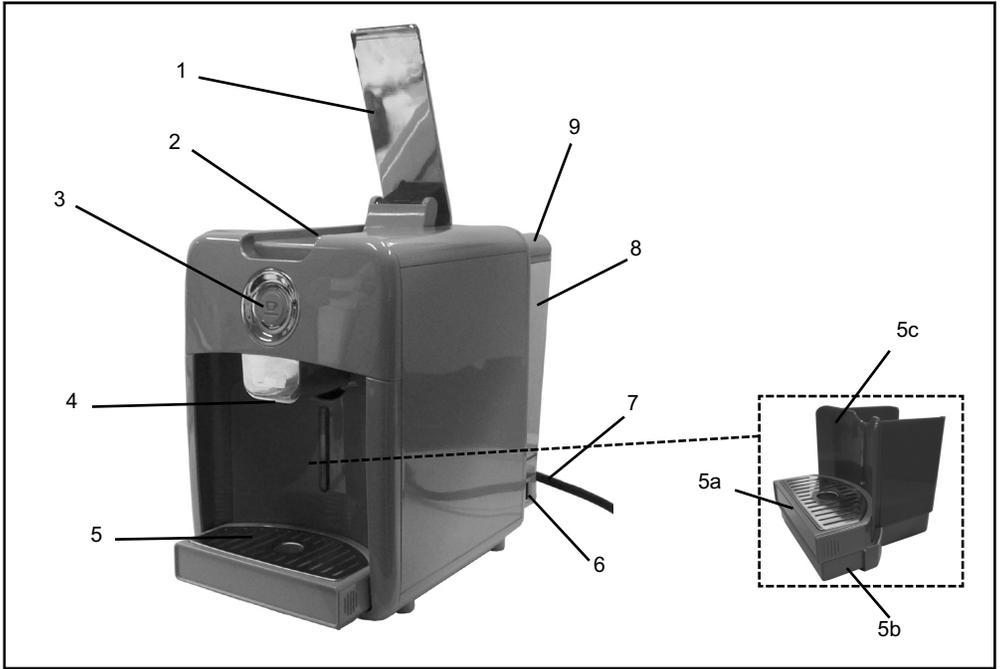

Read these instructions carefully before using the appliance.

KEY

- 1) Capsule compartment lever
- 2) Capsule compartment
- 3) Switch / delivery indicator light
- 4) Coffee dispenser
- 5) Used capsules collection drawer / drip tray
- 5a) Reducer grill
- 5b) Drip drawer
- 5c) Used capsules collection drawer
- 6) Main switch

- 7) Power supply cable
- 8) Reservoir
- 9) Reservoir lid

PRECAUTIONS

KEEP THESE INSTRUCTIONS INSTRUCTIONS

- Read these instructions carefully before using the appliance.

Any use which does not comply with these instructions will invalidate the warranty.

SAFETY WARNINGS:

Risk of electric discharges and/or short circuit

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- If the appliance is left unused, always disconnect it from the mains.
- Never leave the appliance unattended with the cable plugged into the mains.
- Before attempting any maintenance operation, make sure to always disconnect the appliance from the mains.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service cen-

tre.

- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Always turn off the appliance at the on/off switch before unplugging it.
- Never immerse the appliance or any of its parts in water or other liquids and never use the dishwasher to wash the components.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAFETY WARNINGS:

Risk of injury and/or burns during use of the appliance

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- In case of accidental fall of the appliance it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- This appliance is equipped with safety devices which are to be replaced only by a suitably quali-

CE This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

fied technician.

- Before cleaning or storing the appliance, always first ensure that the appliance has cooled down completely.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.
- This appliance dispenses hot liquids that can burn or cause injury. Therefore it cannot be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of the required experience or knowledge.

SAFETY WARNINGS: **use of the appliance**

- Always rest the appliance on a stable surface.
- Do not place the hot appliance on heat-sensitive surfaces. It could damage the surface.
- Never leave the appliance exposed to weathering.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Press the buttons only with a finger, without excessive force and avoid using a pointed object such as a pen.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- During use do not touch the hot surfaces of the appliance.
- Position the appliance on a horizontal work surface.
- Before switching on the appliance, check that there is water in the reservoir.
- To fill the water reservoir use only fresh, clean water, never use sparkling mineral water, demineralised water, distilled water, milk or other liquids.
- While refilling the reservoir, switch off and disconnect the appliance from the mains.
- The presence of water in the used capsule drawer is normal and is due to the emptying of the circuit at the end of each dispensing operation.
- We recommend you use original Polti products only, as products of other brands may not be suitable for use in Polti products and could cause

damage.

- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- This appliance works exclusively with "Aroma Polti" capsules. The use of different capsules invalidates the guarantee.

CORRECT PRODUCT USE

This appliance is intended for household use only according to the descriptions and instructions contained in this user manual. Please read these instructions carefully and keep them, they could be useful in the future.

Polti S.p.A. declines all responsibility in case of accident due to the use of this appliance which is not in accordance with the present instructions for use.

WARNINGS

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users
This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

THE CAPSULE SYSTEM

The machine is designed exclusively for use with the "Aroma Polti" capsule system. Each capsule contains just the right amount and just the right grind to obtain the best espresso coffee in a few seconds. The wrapper on the capsule is made of polypropylene, an excellent material for use in contact with foodstuff. It is hygienic, convenient, and very resistant to high temperatures.

The capsule system is not only very convenient and easy to use, it guarantees all the freshness and

aroma of freshly roasted coffee, so that you can enjoy your favourite blend.

Use with capsules other than "Aroma Polti" capsules will result in forfeiture of the warranty.

In England, "Aroma Polti" capsules can be purchased on the www.aromapolti.com site or by calling the number 0845 1776584

PREPARING THE MACHINE

- Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.
- Position the appliance on a work surface away from water.
- If you use large cups, use the reducer grill (5a) making it slide into the drip tray (5b) (fig. 8).
- If you use small cups, use the reducer grill (5a) positioning it above the drip tray (5b) (fig. 9).
- Open the reservoir lid (9) (fig. 1), remove the water reservoir (8) (fig. 2) and wash it with clean cold water.
- Fill up the reservoir (8) only with clean cold water, replace it in the machine and close the lid. Do not use sparkling water or other liquids to fill the reservoir.
- Plug the power lead (7) into a suitable socket with an earth connection.
- Switch on the appliance by pressing the power switch (6) (fig. 3). The red light of the switch/indicator will come on (3). Wait until the light becomes green. At this point you can make coffee.

WARNING:

- **The first time you use the appliance, it is important to carry out a wash cycle as described in the paragraph "MAINTENANCE".**
- **Whenever the machine is turned on, it is recommended to brew only water for a few seconds, without introducing any capsules, so as to stabilise the temperature and clean brewing parts.**
- **After the first time the green light comes on, coffee can be regularly dispensed even if the red switch/indicator light (3) is on. The alternation of the red or green light is due to the normal heating cycle of the boiler.**

PREPARING THE COFFEE

- Place a cup under the coffee dispenser (4).
- Open the lever of the capsule compartment (1) and place the capsule in the compartment (2), in

the position suggested by the shape of the latter. Close the door pushing it home (fig. 4).

• ATTENTION: the capsule is pushed automatically into the compartment by closing the lever (1) pushing it all the way down. Do not use your fingers for any reason to push the capsule.

- Press the coffee dispenser switch/indicator light (3). A few moments later, the coffee will start to come out. Once the desired quantity of coffee has been dispensed, press the switch/indicator light again (3) to stop delivery. You can thus prepare a long or short coffee according to preference, by simply dosing the quantity delivered.
- The used capsule will automatically fall into the special drawer (5c) every time the lever is opened (1). **The used capsule drawer must be emptied frequently to prevent the accumulation of used capsules from clogging the exit channel.**
- To empty the capsule collection and drip drawer (5) proceed as follows:
 - Remove the drawer (5) from the appliance (fig. 6).
 - Separate the drip drawer (5b) from the capsule drawer (5c) (fig. 7) and empty them.
 - Fit the parts back into the appliance.

MAINTENANCE

- Before attempting any maintenance operation, make sure to always disconnect the appliance from the mains.
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents as these could damage the plastic surfaces.
- Empty the capsule drawer (5c) and the drip tray (5b) regularly.
- Wash the accessories with water and detergent.
- Never wash any part in a dishwasher.

CLEANING CYCLE

Run the cleaning cycle once a year for an average use of 3 capsules per day. For greater use, run it earlier. For greater use, run it earlier.

Proceed as follows:

- Fill the reservoir (8) with water and add a bottle of Clean Espresso, a special descaling and degreasing product, following the instructions on the package.
- Place a large container under the coffee outlet
- Open the lever (1) of the capsule compartment, make sure that the capsule falls into the capsule

- collecting compartment, and close it by pushing it home.
- Pressing the dispenser switch/indicator light(3): the machine will dispense water. Repeat this operation until all the water in the reservoir has been emptied (8).
- Repeat the process with water only, without Clean Espresso.
- At the end of the process the machine is ready for brewing drinks.



To clean and maintain your Polti capsule coffee-maker, we recommend using the Clean Espresso cleaning kit (item code PAEU0176). Clean Espresso cleans and protects, extending the life of your coffeemaker thanks to two new, specifically designed formulas (decalcifying and degreasing).

Clean Espresso is available at www.aromapolti.com or by calling the number 0845 1776584

If you decide to use the CLEAN ESPRESSO cleaning kit, we recommend repeating the action described at point 8 of the instruction manual at least three times, in order to rinse the insides of the machine thoroughly

CUSTOMER SERVICE

To purchase the "Aroma Polti" capsules or the Clean Espresso Kit in England, you can call the number 0845 1776584 or connect to the www.aromapolti.com site.

TROUBLESHOOTING		
Problem	Cause	Solution
The capsule compartment lever (1) does not close (do not force it).	The capsule collection drawer (5c) is full of used capsules.	Empty the capsule collection drawer.
The appliance appears to work properly, but does not dispense coffee.	No capsule in the compartment.	Put a capsule in the compartment and repeat the process.
The flow of coffee is irregular and flows outside the cup.	The dispensing nozzle is dirty.	Clean dispensing nozzle with a damp cloth.