


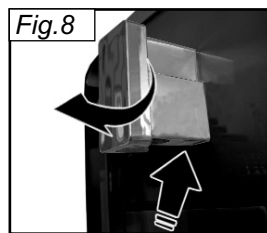
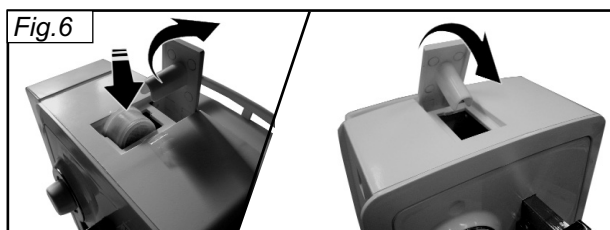
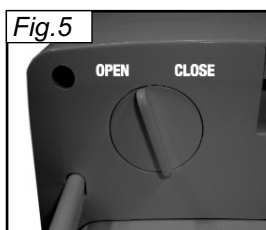
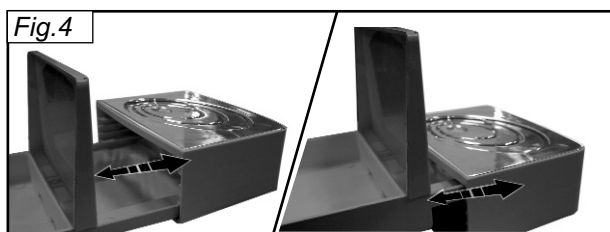
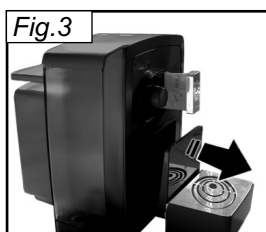
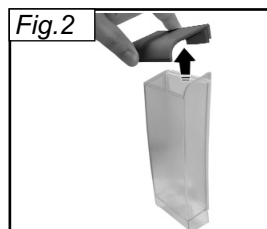


# LUPIN THE 3rd

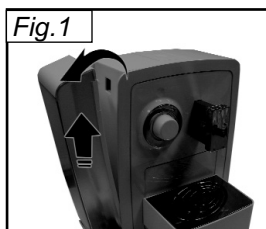

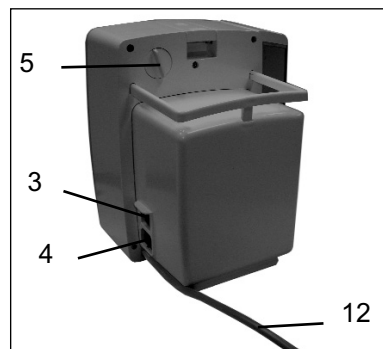

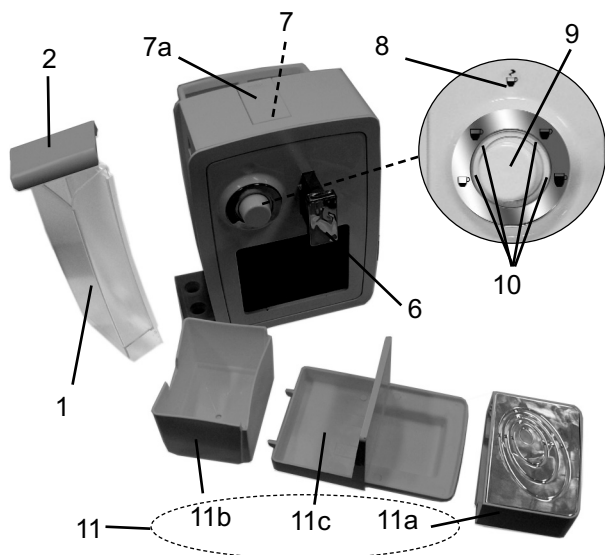

Read these instructions carefully before using the appliance.

## LEGEND

- 1) Water reservoir
- 2) Reservoir lid
- 3) Main switch
- 4) Auxiliary socket for cappuccino maker
- 5) Cream knob
- 6) Coffee dispenser
- 7) Capsule compartment
- 7a) Capsule compartment door

- 8) Supply sensor
- 9) Drink length adjustment knob
- 10) Drink length indicators
- 11) Collection drawer
  - 11a) Cup resting surface
  - 11b) Capsule collection compartment
  - 11c) Liquid collection compartment
- 12) Power supply cable

**CE** This appliance conforms with Directive 2004/108/EC (EMC) and Directive 2006/95/EC (low voltage).

POLTI S.p.A. reserves the right without prior notice to introduce technical and construction changes as it considers necessary.

## PRECAUTIONS

### KEEP THESE INSTRUCTIONS

- Read these instructions for use carefully before using the appliance. Any use which does not comply with these instructions will invalidate the warranty.
- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts are damaged.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- If it is necessary to replace the power supply ca-

ble, please refer to the nearest Polti authorised service centre, since the use of a special tool is necessary.

- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near a bathtub, shower or container full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- Do not lay the hot appliance on surfaces sensitive to heat.
- Do not leave the appliance exposed to wind or rain.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to extreme temperatures.
- Never let children or people who are not familiar with how the appliance works use it.
- Do not press the buttons hard or with a pointed object such as a pen.
- Always rest the appliance on a stable surface.
- In case of accidental fall of the appliance it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Service Centre.
- In order to avoid prejudicing the safety of the appliance, use only original spare parts and accessories approved by the manufacturer.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- It is necessary to keep the appliance in horizontal position during operation.

- Check that there is water in the reservoir before turning on the machine.
- Always fill the water reservoir with cold clean water. Do not use mineral water, distilled water, milk or any other liquid.
- During refilling with water, switch off and disconnect the appliance from the mains.
- Do not wash coffee machine accessories in the dishwasher.

**WARNING: the capsule is automatically pushed into the compartment when the door (7a) is closed, pushing it as far as it will go. Never push the capsule in with your fingers.**

- The presence of water in the capsules collection drawer is normal and is due to emptying of the circuit after making each cup.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance must not be used if it has fallen, been dropped or when it has visible signs of damage or leaks.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## CORRECT USE OF THE PRODUCT

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

Please read the instructions carefully and keep them, as they could be useful to you in the future.

**Polti S.p.A declines liability for any damage or accident derived from any use of this appliance which is not in conformity with the instructions contained in this manual.**

## ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users  
This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan. Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

## THE CAPSULE SYSTEM

The machine is designed exclusively for use with the "Aroma Polti" capsule. Each capsule contains just the right amount and just the right grind to obtain the best espresso coffee in a few seconds. The wrapper on the capsule is made of polypropylene, an excellent material for use in contact with food-stuff. It is hygienic, convenient, and very resistant to high temperatures.

The capsule system is not only very convenient and easy to use, it guarantees all the freshness and aroma of freshly roasted coffee, so that you can enjoy your favourite blend.

**Use with capsules other than "Aroma Polti" capsules will result in forfeiture of the warranty.**

## SET UP - PREPARATION OF THE MACHINE

- Carefully remove the machine and the accessories from the package.
- Move the water tank slightly towards the outside of the appliance (1) and pull upwards to remove (fig.1).
- Open the reservoir lid (2) (fig.2) and rinse the reservoir (1) using clean cold water.
- Fill the reservoir (1) with clean cold water only, put it back into the machine and close the lid.  
Do not fill the reservoir with carbonated water or any other liquid.
- Insert the power cable plug (12) into a suitable

earthed socket.

- Turn on the appliance by pressing the main switch (3). During warm-up the 4 drink length indicators (10) light up in sequence.

When optimal operating temperature is reached, the supply sensor (8) remains fixed on as well as the indicator (10) corresponding to the selected length.

- The height of the cup resting surface can also be adjusted (11a) to two different positions (high or low), depending on whether mugs or coffee cups are being used.

To adjust the surface height lift and remove the collection drawer (11) from the appliance (fig.3), pull out the cup surface rest (11a) from the liquid collection compartment (11c), as shown in fig. 4, and replace in the most suitable position.

**WARNING:** The first time you use the appliance, it is important to do a washing cycle using a cleaning capsule provided as described in the "MAINTENANCE" section.

## MAKING COFFEE

- Put a cup under the coffee dispenser (6).
- Ensure that the cream knob (5) on the back of the appliance is in the open position (OPEN) (fig.5).

When open (OPEN), the cream tap (5) exploits the "Venturi" effect, namely the coffee is mixed with air, making it extra creamy.

- Open the capsule compartment door (7a) and put a capsule in the compartment (7), in the position suggested by its shape (fig.6).
- Close the door, pushing it all the way.

- **WARNING: the capsule is automatically pushed into the compartment when the door (7a) is closed, pushing it as far as it will go. Never push the capsule in with your fingers.**

- Adjust the length of the drink to be supplied by turning the knob (9) to one of the 4 pre-set regulations.

The first 3 indicator lights correspond to short, medium and long coffee, the last, instead, is for drinks like tea (fig. 7).

The choice is shown by the turning on of a length signaller (10) positioned at the level of the chosen length.

- Touch the supply sensor (8). A few moments later, the coffee will start to come out.

The supply stops automatically once the previously selected quantity has been dispensed. Supply can in any case be interrupted at any stage

by pressing the supply sensor once again (8).

- The used capsule automatically falls into the collection drawer (11) when a new one is placed in the compartment (7).

**Empty the used capsules drawer frequently to ensure that used capsules do not block the exit passage.**

**NOTE:** before the cleaning operation, ensure that the empty capsule has been inserted and then touch the supply sensor (8). If the instruction is not followed, the water supplied is collected in the liquid collection compartment (11c) instead of coming out from coffee dispenser (6).

## PREPARATION OF DRINKS / TEA

This machine can prepare also some other drinks and infusions with Aroma Polti Line.

- Before preparing drinks or tea, close the cream knob (5) by rotating it to the "CLOSE" position (fig.5).
- To supply the drink, proceed as for preparing coffee.

**WARNING: always ensure that the cream knob is repositioned to "OPEN" before preparing coffee again.**

## SHORTAGE OF WATER

Lack of water in the tank is signalled by the simultaneous flashing of the 4 drink length indicators (10). Fill the tank again as described previously.

## AUXILIARY SOCKET FOR CAPPUCCINO MAKER

It is possible to connect the Cappuccini (optional) to the coffee machine with the auxiliary socket (4).

Open the auxiliary socket door with a screwdriver.

**Warning: This operations must be followed with the coffee machine not connected to the main power. Follow then the Cappuccini instruction manual.**

# Cappuccini



The new Polti milk foamer is perfect for all the persons that want to foam the milk and arrange a good cappuccino like the bar.

It is easy to use.

It is provided with a comfortable anti splash cap and a non-stick jug for a fast heating and easy cleaning.

It is possible to connect Cappucci to the main power or directly to the "Lupin" machine.

### ENERGY SAVING MODE

Approximately 10 minutes after the last use of the appliance, it will enter "ENERGY SAVING" mode where the device is disabled. This mode is signaled by the flashing of the supply sensor (8).

To reactivate the appliance normally, simply touch the supply sensor (8).

### MAINTENANCE

- Always unplug the appliance before performing any maintenance operations.
- Clean the outside of the appliance with a damp cloth only. Never use solvents or detergents, as they could damage the plastic surface.
- To clean the brewing elements and to help maintain your Polti capsule coffeemaker, use a cleaning capsule at least every 2/3 days. Cleaning is carried out in the same way as coffee is prepared, by adjusting the drink length adjustment knob (10) to that for tea (fig. 6).

**RECOMMENDATION:** Place a dish underneath the outlet to collect water.

- Every time you clean the infusion parts, we recommend you also clean the coffee dispenser. Unhook the cover to the coffee dispenser (6), pushing the lever down as far as it will go and slipping it off (fig.7). Clean the parts where the coffee flows using a soft, damp sponge and then return the cover to its position.
- Remove the collection drawer (11), emptying it and clean regularly after having separated the 3 compartments (11a, 11b and 11c).
- Do not leave water in the machine's tank during periods of disuse.
- To keep the tank hygienically clean, rinse it daily.



To clean and maintain your Polti capsule coffee-maker, we recommend using the Clean Espresso cleaning kit (item code PAEU0176).

Clean Espresso cleans and protects, extending the life of your coffeemaker thanks to two new, specifically designed formulas (decalcifying and degreasing).

**Clean Espresso is available at [www.aromapolti.com](http://www.aromapolti.com)**

If you decide to use the CLEAN ESPRESSO cleaning kit, we recommend repeating the action described at point 8 of the instruction manual at least three times, in order to rinse the insides of the machine thoroughly.

PROBLEM	CAUSE	SOLUTION
All luminous indicators (10) and the supply sensor (8) are off.	The appliance is not plugged in The main switch (3) is off	Plug the power cable into a suitable power outlet Turn on the main switch
The 4 drink length indicators flash simultaneously and the sensor (8) is off.	The water reservoir (1) is empty or incorrectly inserted.	Fill the water reservoir (1). Check that the reservoir has been inserted correctly.
The first and last drink length indicator (10) and coffee sensor (8) flash alternatively in a clockwise direction.	Appliance malfunction.	Turn the appliance off and on again. If the problem persists, contact an authorised service centre.
The collection drawer (11) does not close (do not force)	The drawer is full of used capsules	Empty the drawer and put it back in the appliance.
The appliance appears to work properly, but it does not dispense coffee	No capsule in the compartment. Empty capsule for cleaning in the compartment.	Put the right capsule in the compartment and repeat the process.
The machine does not make coffee the first time it is turned on or after filling the reservoir	The reservoir has not been inserted correctly, or the appliance is initially unable to obtain water	Insert the reservoir correctly and make sure it has been completely filled
Coffee dispensed at an angle or outside the cup.	Coffee dispenser nozzle dirty	Clean as specified in the "Maintenance" section