

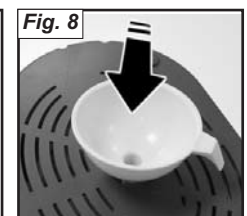
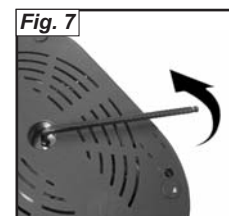
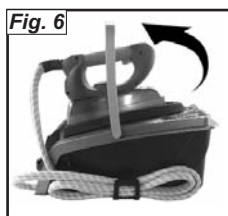
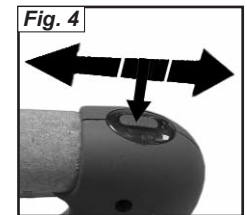
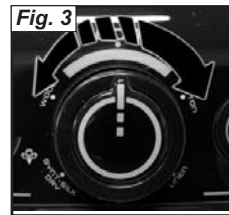
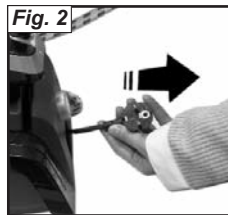


# Vaporella®

FOREVER 1905 ECO PROGRAM

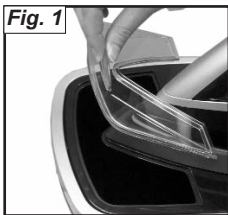

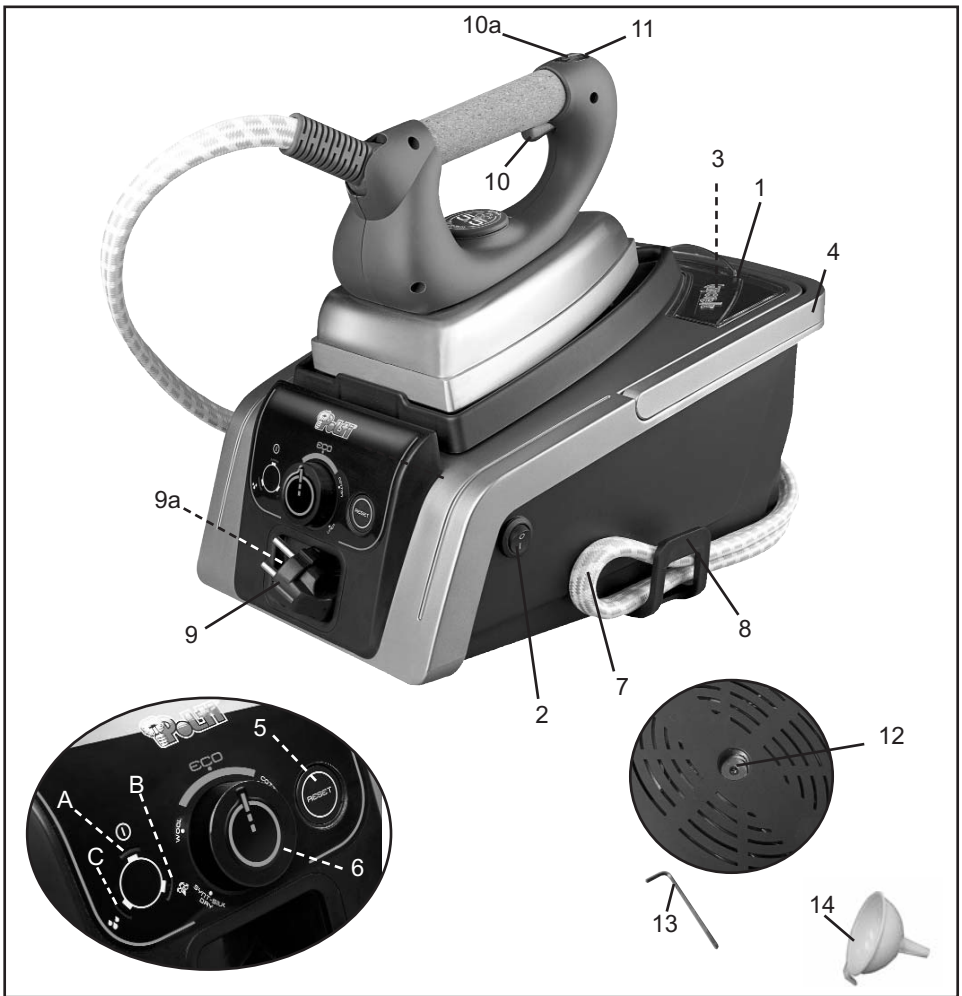

# VAPORELLA FOREVER 1905 ECO PROGRAM



Read these instructions carefully before using the appliance.

*Dear Customer*

*Thank you for your confidence in buying this Polti product for perfect ironing in less time.*

*Your Vaporella has been designed to ensure maximum ironing comfort; its quality materials make it a reliable work-mate.*

*The powerful jet of Vaporella steam acts on the fabrics eliminating every crease.*

*Therefore it is not necessary to press on or iron repeatedly. Just let the iron slide over the garment to obtain perfect ironing, saving time and effort.*

*With Vaporella it is possible to iron vertically to revive fabrics and take out bad smells from jackets, clothes and overcoats.*

*Vaporella Forever 1905 Eco Programme, with its 5 operating modes ensures use of just the right quantity of steam and the most appropriate iron temperature at all times, eliminating creases without useless energy consumption. The Eco function allows for perfect clothes whilst saving up to 40% electricity.\**


*Thanks to its self-refilling system, Vaporella is quickly ready for use and does not need any interruption to your ironing for refilling the boiler.*

*Before using Vaporella, we recommend reading these instructions carefully.*

(\* Values measure relative to the Linen mode)

## KEY

- |                                      |                              |
|--------------------------------------|------------------------------|
| 1) Tank lid                          | A) ON indicator light        |
| 2) ON/OFF switch                     | B) Steam pressure indicators |
| 3) Tank                              | C) ON/OFF indicator light    |
| 4) Carry handle                      |                              |
| 5) "RESET" button                    |                              |
| 6) Selection dial                    |                              |
| 7) Flex (Steam and electric)         |                              |
| 8) Flex housing (Steam and electric) |                              |
| 9) Power supply cable                |                              |
| 9a) Cable winder                     |                              |
| 10) Steam request button             |                              |
| 10a) Continuous steam jet button     |                              |
| 11) "Iron heating" indicator light   |                              |
| 12) Boiler cap                       |                              |
| 13) Hexagon wrench                   |                              |
| 14) Filler funnel                    |                              |

 This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).

Politi S.p.A. reserves the right to change equipment or accessory specification without prior notice.

## PLEASE READ THE FOLLOWING BEFORE USE

### KEEP THESE INSTRUCTIONS

- Read these instructions for use carefully before using the appliance.
- Use which does not comply with these instructions will invalidate the warranty.
- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts are damaged.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- If it is necessary to replace the power supply cable, please refer to the nearest Polti authorized service centre, since the use of a special tool is necessary.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near a bathtub, shower or container full of water
- Never immerse the appliance, the cable or the plugs in water or other liquids.
- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- Do not lay the hot appliance on surfaces sensitive to heat.
- Do not leave the appliance exposed to wind or rain.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to extreme temperatures
- Never let children or people who are not familiar with how the appliance works use it.
- Do not press the buttons hard or with a pointed object such as a pen.
- Always rest the appliance on a stable surface.
- In case of accidental fall of the appliance it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Service Centre.
- In order to avoid prejudicing the safety of the appliance, use only original spare parts and accessories approved by the manufacturer.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- During refilling with water, switch off and disconnect the appliance from the mains.
- It is necessary to keep the unit in horizontal position during operation.
- Do not direct the steam jet on electrical and/or electronic appliances.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- This appliances is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Do not direct the steam jet at people, animals or debris. **Danger of burns!**
- Never place your hands inside the jet of steam. **Danger of burns!**
- Do not put any detergent or chemical substance in the boiler. By nature, water contains magnesium, mineral salts and other deposits that favour the formation of scale. To prevent these deposits from causing damage to the appliance, the ideal solution is represented by the use of KALSTOP FP 2003, a special natural descaling agent that removes scale. This

allows avoiding scale formation and protecting the metal walls of the boiler. KALSTOP can be found in small appliance stores and Polti service centres. Alternatively, we recommend using a 50/50 mixture of tap water and demineralised water.

- Do not use demineralised water alone, but mix it with tap water as described above.
- **Never use distilled water or scented water.**
- We recommend you use original Polti products only, as products of other brands may not be suitable for use in Polti products and could cause damage.
- If you iron sitting down, do not place your legs under the ironing board, the steam can cause burns.
- Iron only on heat resistant surfaces and on surfaces that allow the steam to escape e.g. mesh ironing boards.
- For iron rest replacement use only original spare parts.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, make sure that the surface on which the stand is placed is stable.
- Check that the continuous steam request button is switched off before connecting the appliance to the mains.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance must not be used if it has fallen, been dropped or when it has visible signs of damage or leaks.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is intended for home use as a steam generator as described and in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them, as you may find them useful in future.

**Politi Spa declines liability for any damage or accident derived from any use of VAPORELLA which does not comply with the instructions contained in this booklet.**

## ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

## IMPORTANT

Before leaving our factory all our products are rigorously tested. This is the reason why your VAPORELLA may contain some residual water in the boiler.

---

---

CORRECT USE OF THE  
PRODUCT

## PREPARATION FOR USE

- Pull up the self-refilling tank lid (1) (Fig. 1) and fill the tank with 1,2l of water, making sure it does not overflow. Close the lid.

Ordinary tap water may also be used. However, since water contains limestone by nature, which may cause scaling in the long run, we recommend using a 50/50 mixture of tap water and demineralised water or treated with softening systems. To use tap water only and avoid scale formation, we recommend the addition of the special natural scale removal agent Kalstop FP 2003.

Do not use demineralised water alone, but mix it with tap water as described above.

**Never use distilled water or scented water.**

- Slowly pull out the power cable (9) to the desired length as shown in (fig. 2).
- Connect the cable plug to an earthed power supply of the correct voltage.
- Press the ON/OFF switch (2). The ON indicator light (A) and the "Iron heating" indicator light (11) will turn on.
- The sound emitted on switching on your appliance and periodically during use, is due to the water refilling system and is quite normal.

## INSTRUCTIONS FOR USE

Check the manufacturer's label on the garment, and interpret the symbol on the label as follows:



- It is best not to use steam when ironing silk or synthetics, as iron temperature and pressure will be enough to ensure good results. Use the WOOL setting if you wish to iron particularly delicate fabrics (synthetics and silk) with steam.
- To optimise ironing time, iron the most delicate fabrics (SYNTH/SILK settings) before heavier fabrics. If you do it the other way around, even if steam production is not stopped, you will have to wait for the iron and the boiler to cool down to the selected iron temperature and steam pressure.

Check, based on the following table, the most appropriate type of ironing:

### DRY IRONING



Adjust the selection dial (6) to the SYNT SILK DRY position.



Wait until the iron heating light (11) turns off.



Ironing instructions given on the label 		SETTING
<b>Type of fabric:</b>	Nylon	
	Silk	
	Acetates	
	Viscose	
	Acrylic Polyester	
	Velvet	

### STEAM IRONING

Set the correct programme by turning the selection dial (6) corresponding to the type of fabric to be ironed (Fig.3).

Ironing instructions given on the label 		SETTING
<b>Type of fabric:</b>	Wool	
	Fibres	

Ironing instructions given on the label 		SETTING
<b>Type of fabric:</b>	Cotton	
	Denim	

Ironing instructions given on the label 		SETTING
<b>Type of fabric:</b>	Linen	

- After setting the desired programme, the steam ready light (B) flashes. (except if using the SYNT SILK DRY programme, in which case the boiler remains off).
- Before starting to iron, wait for the steam pressure indicator (B) to remain on fixed and the "Iron heating" indicator light (11) to go out.
- Push the button (10) on the iron to release bursts of steam from the holes on the sole-

plate. Release the button and the steam flow stops.

**NOTE:** during initial operation of the iron, a few drops of water mixed with steam may come out of the soleplate until the temperature stabilises. It is advisable to direct the first jets of steam onto an old cloth until a uniform jet of steam is obtained.

- In order to have a continuous steam jet, move the button (10a) forwards. Steam will keep on coming out, even releasing the steam request button. To interrupt the outlet, move the button (10a) backwards (fig.4).

### NOTE:

- The "Iron heating" indicator light (11) turns on and off during use. This indicates that the electrical resistor has started to work to keep the temperature in the iron steady. This is a normal occurrence, and it is therefore possible to continue ironing.



The symbol on the label means:  
do not iron

## ECO FUNCTION

Set the programme by turning the selection dial (6) corresponding to the "ECO" indication.



With the ECO function on, the appliance sets itself to a medium level of both steam pressure and iron temperature, thereby optimising consumption whilst ensuring optimum ironing of the hardest-wearing fabrics (cotton / jeans / linen).

**Do not use this mode for ironing synthetic, silk and wool clothing**

## SHORTAGE OF WATER

The lack of water in the tank (3) is signalled by the indicator light (C) coming on.

To return to ironing, proceed as follows:

- Fill the tank (3) again, as described in the paragraph "PREPARATION".
- Press the "RESET" (5) (Fig5) key to turn off the no water light (C).

## PUTTING AWAY THE APPLIANCE

Make sure the appliance has cooled down completely before putting it away.

- Tug on the power cable gently (9) until it clicks once, and then accompany it with your hand as it is automatically wound up by the cable winder (9a).
- Position the flex (steam and electric) (7) in the specific housing (8) (fig. 6).
- Carry the Vaporella by its convenient carry handle (1) (fig.6).

**ATTENTION:** before moving Vaporella by its carry handle, ensure that you have replaced the power supply cable (9) and flex (steam and electric) (7) as described previously.

## ENERGY SAVING

### STAND-BY FUNCTION

After 10 minutes of the appliance not being used, it automatically goes into stand-by mode. Both the boiler and iron are switched off. The indicator lights (A), (B) and (C) flash simultaneously.

To re-activate the appliance, press the steam request button (10).

N.B.: The stand-by function will not be applied if the selection dial (6) is set to "SYNT SILK DRY".

## CARE OF YOUR VAPORELLA

- **Before attempting any maintenance operation, always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

## CLEANING THE BOILER

- Disconnect the appliance and let it cool down for at least 2 hours.
- Empty the water tank to prevent leakage.
- Turn the appliance upside-down and use the hexagon wrench (13) to unscrew the boiler cap (12) on the bottom of the appliance (fig.7).
- Use the funnel (14) to pour 250 ml of cold water into the boiler.

**CAUTION: do not pour more than the specified amount of water into the boiler. Pour water slowly, being careful not to let it overflow, as this could damage the appliance (fig.8).**

- Rinse out the boiler and pour the water away into the sink or into a container for collecting dirty water.
- If the water is very dirty, repeat the operation until it is clean.
- Before screwing the boiler cap (12) back on, pour 100 ml of water in.

**Do not operate the equipment again with the boiler empty.**

- Put the cap back on the boiler, checking that the seal is present and that the cap is screwed on properly.
- Fill the water tank again and put the cap on.
- Turn the appliance on again.
- Before ironing, release steam into the sink or another container and check that the steam is clean. This should take a few seconds.
- Resume ironing normally.
- To maintain optimum performance, clean the boiler every 10/20 uses depending on the amount of limestone in the water.